




Product name:	ITS4852A Smart-hopping 2.4GHz Access Point		
Reference Identifier:	989803171221		
Total weight (in Kg):	0.680 Kg		
Producer /Manufacturer	Name company:	Philips Healthcare	
	Address:	3000 Minuteman Road	
	Zip code:	Andover, MA 01810	
	Country:	USA	

Recycle info	Substances:	Location
Special attention 	<i>Indicate any part of the product that could pose a hazard to the recycler and treatment facility during disassembly such as capacitors with residual energy or spring loaded valves and show location</i>	N/A
	N/A.	

Batteries	Type:	Location
 To be removed	<i>Indicate all batteries in the product via battery chemistry and show location</i>	N/A
	N/A	

Hazardous	Item	Location
 To be removed	<i>Indicate location of printed circuit boards and mercury in back lights as well as any cadmium, flame retardants (PBB and PBB) and hexavalent chromium in the product and show location</i>	
	General Disassembly	See Figure #1
	453564195941 Radio PCA (RoHS Compliant)	See Figure #2
	453564195951 System PCA (RoHS Compliant)	See Figure #3

Additional Information as needed

Material content (global)	Weight in Kg	Materials content (continue)	Weight in Kg
453564195951 System PCA	0.200		
453564195941 Radio PCA	0.060		
Sheet Metal & Misc Hardware	0.420		

Locations as mentioned in the Passport (Pictures information)

Figure #1 –General Disassembly

Remove (1) Torx Screw



Figure #2 – Radio PCA

**Clip off (4) Nylon Spacers
and
Remove (2) Nuts**

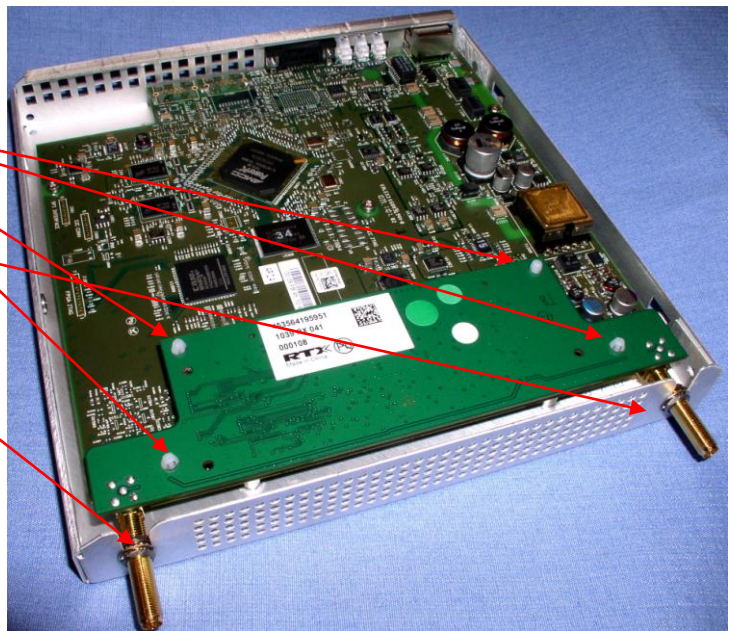


Figure #3

**Remove (4) Torx Screws
and
(2) Jackscrews**

